

User's Manual

TS200 Modulated Power Supply

Battery Simulator/Emulation

Waveform Amplifier

Power/Current Amplifier

PSRR/CMRR Measurement

Voltage Supply Transient Measurement

Warranty Information

Accel Instruments Corporation (hereon referred to as Accel Instruments) warrants this product for a period of one (1) year from date of shipment. If the device is defective within the warranty period, Accel Instrument will either repair or replace the product. Warranty is voided if the device is opened by anyone other than Accel Instruments.

Warranty Limitations

This warranty does not apply to normal wearing or misuse of the product or part. Failure to follow proper operating instructions described in this document is not cover by warranty. Warranty is void if any modification to the product without Accel Instrument's express written consent.

Safety Precautions

	Output voltage is up to 72VDC. To avoid the risk of electrical shock, use proper safety techniques when operating this device. Avoid touching any part of the non-insulated output connection during operation.
	Avoid the risk of electrical shock, do not open the device.
	Caution: The TS200 heatsink may be hot. Avoid touching the heatsink.

- This device is intended for qualified trained personnel who must use proper electrical safety precautions
- Read and follow all installation and operating information before using this device.
- Use only AC power cable provided with this device.
- Proper grounding of the device is required. Use only properly-grounded power receptacle.
- Inspect the device before operating. If it appears damaged or defective, do not use it.
- Preset the output voltage before making connections to output terminals.
- Do not open the device. Do not operate device without the cover.
- Do not operate or store the device outdoors.

Thermal Considerations

The TS200 is designed for indoor operation and within the environmental temperature range of 0C to +40C. While operating, the device generates heat. The TS200 must be placed on a location with enough space all around it. There must be sufficient space around the heatsink in the rear to allow cooling.

Warning: The heatsink may be hot. Avoid touching the heatsink.

Table of Contents

Chapter 1	Overview	5
	Introduction.....	5
	Basic theory of operation.....	5
Chapter 2	Basic Operation	6
	Front Panel.....	6
	Connect AC Power.....	6
	Turn On Power.....	6
	Enable/Disable the Output.....	7
	Preset Output Voltage.....	7
	Connect Output to the DUT.....	7
	Modulation Input.....	7
	AC/DC Couple.....	8
	Power Amplifier.....	8
	Remote Control.....	8
Chapter 3	Advance Operation	9
	Waveform Amplifier.....	9
	Battery Simulator.....	9
	LDO PSRR Measurement.....	10
	LDO PSRR Measurement with Oscilloscope.....	11
	Amplifier PSRR Measurement.....	12
	Amplifier CMRR Measurement.....	14
	Line Transient Measurement.....	15
	Power Supply Noise Injector.....	16
Chapter 4	Specifications	17
	Electrical Specifications.....	17
	General Specifications.....	17
	TS200 Options.....	18
	Typical Performance.....	19

Chapter 1: Overview

Introduction

The [TS200 Modulated Power Supply](#) is a unique instrument for many test and measurement applications such as LDO PSRR measurement, battery simulator, op amp CMRR measurement, function generator amplifier, transient response test, four-quadrant power supply, lab power amplifier and more. It is designed for bench test and measurement. It can output DC or AC voltage or both. For example, it can output a 3.3V DC voltage with a 300mVpp AC sinewave riding on top of it. The TS200 features a modulation input to modulate the output to produce any desired waveform.

Basic theory of operation

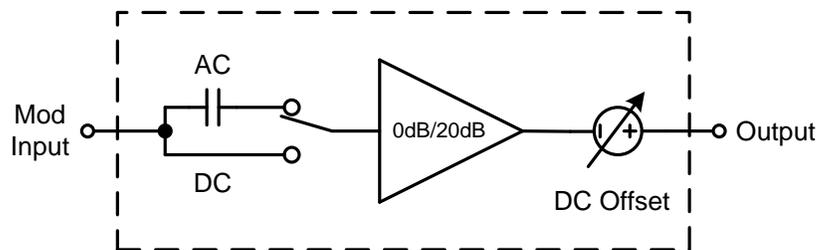


Figure 1. TS200 Functional Equivalent


Figure 1 shows the TS200 modulated power supply functional equivalent diagram. It consists of an AC-coupled or DC-coupled input, a high current amplifier, and a DC output offset. The adjustable DC offset sets the modulated power supply DC voltage. This DC offset feature is ideal for LDO or amplifier PSRR measurement, because they require a DC voltage.

The TS200 input signal is selectable either AC-coupled or DC-coupled. This allows added flexibility for TS200 to work with a variety of instruments such as network analyzers and function generators.

The A-version of the TS200 modulation input gain by unity (non-inverted). The B-version of the TS200 modulation input is amplified by a factor of 10 or 20dB. The amplifier configuration is non-inverted. The TS200 output can drive heavy resistive load or capacitive load or both. Up to 3.5A is possible.

Chapter 2: Basic Operation

Front Panel

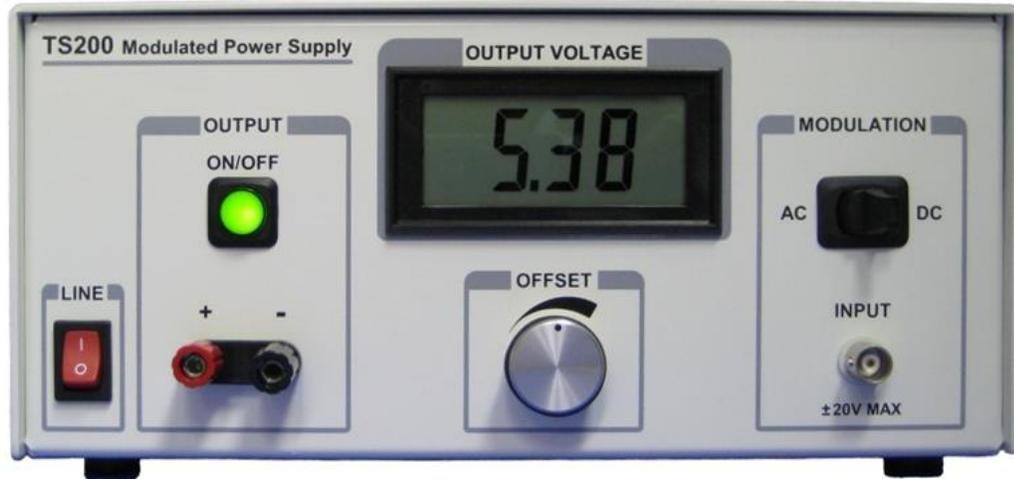

Connect AC Power

Connect the AC power cord (included) to the TS200 first. Then plug the AC power cord to the wall outlet. The TS200 input is universal and can accept 100V to 230V, 50Hz and 60Hz, line voltage.

Warning: The AC power cord included in the TS200 is for North American wall plug only. It is equipped with 3-wire grounding connection. The TS200 must be plug-in into a 3-wire outlet with proper grounding. For other regions, proper power adopter with must be used. Make sure the adopter has proper grounding connection.

Turn On Power

Turn on the device by press the LINE button to the “1” position. The LCD screen will turn on. Note if the output is not enabled, the LCD will display 0.0V.

Warning: To avoid potential damages to external circuits connected to the output terminals, preset the output voltage before turn on the device (see below).

Enable/Disable the Output

Press the ON/OFF button to enable the output. The ON/OFF button will light with a green light. Press the ON/OFF button again will disable the output. The output is high-Z when disabled.

Warning: To avoid the risk of electrical shock, always disable the output before making wire connections. While the output is enabled, avoid physical contact with any non-insulated electrical connections.

Preset Output Voltage

Before making any output wire connection, press the ON/OFF button to enable the output (previous section). The LCD displays the output voltage. Turn the OFFSET knob to set the DC voltage. Turn to the right to increase the voltage and turn to the left to decrease the voltage. Once the desired voltage is set, press the ON/OFF button to disable the output for output wire connection.

Connect Output to the DUT

The TS200 output terminals are designed for banana connectors. Connect the OUTPUT to the DUT (device under test) using cables with banana connectors (not included). For best performance, especially for high frequency applications, keep the connection wires as short as possible. Twist the + and – wires leads together to minimize inductance. For high current applications, make sure the connection wires are heavy gauge to avoid excessive voltage drop.

Note: The TS200 output is isolated from the chassis.

Modulation Input

The TS200 features a modulation input (BNC connector). The modulation input modulates the TS200 output voltage. This feature makes the TS200 ideal for PSRR and CMRR measurement or as a current or power amplifier. Any voltage applied to MODULATION input will increase the output voltage. For example, while the TS200 is set to DC-couple, a +1V applied to MODULATION input will increase the TS200 output voltage by +1V for unity gain version or +10V for 20dB gain version.

Warning: The MODULATION input maximum voltage is +/-20V. Exceed +/-20V could damage the device.

AC/DC Couple

The modulation input can be AC or DC coupled. Remember the output voltage is the superimposed of OFFSET voltage and MODULATION voltage.

Power Amplifier

The TS200 can be used as a current or power amplifier. The modulation input serves as amplifier input. The TS200 offers 0dB and 20dB gain options.

Remote Control

The MODULATION input can serve as a remote voltage setting. To do so, adjust the OFFSET knob until the voltage reaches 0.0V and set to DC-couple, then apply a DC voltage to MODULATION input. The DC input voltage can come from a programmable power supply or DAQ (data acquisition). Whatever the voltage on the MODULATION input is amplified and output to the OUTPUT terminals. Note the TS200 offers two gain options: 0dB and 20dB.

Chapter 3: Advance Operation

Waveform Amplifier

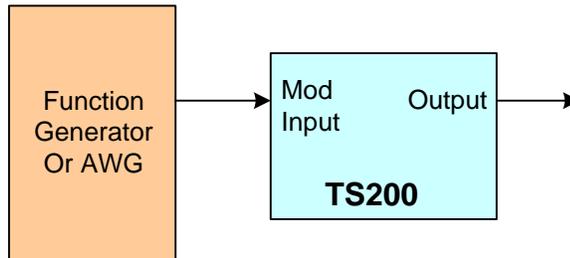


Figure 2. Waveform amplifier setup

The TS200 is also ideal for amplifying waveforms for driving high-voltage or high current or both. It is ideal for amplifying function generator output to drive heavy load. TS200 is ideal for [laboratory power amplifier](#).

Figure 2 shows the connection of the [TS200 high-current amplifier](#). The function generator or arbitrary waveform generator (AWG) output is connected the TS200 modulation input. Typically, the TS200 DC Offset or DC output voltage is set to zero and the modulation input is set to DC-couple.

If the B-version of the TS200 is used, the gain is 20dB. Since the function generator's output voltage is amplified by a factor of 10. If the TS200 is set to DC-couple, both the DC voltage and AC signal are amplified by a factor of 10. If TS200 is set to AC-couple, only the AC signal is amplified. The TS200 DC output is set by its DC OFFSET knob.

Battery Simulator and Four Quadrant Supply

The TS200 can be used as a four-quadrant power supply or a batter simulator. Four-quadrant power supply can output positive or negative (see voltage range option) voltage and can sink or source current. The TS200 can act as a battery simulator. It can output a positive voltage and can sink or source current – just like a real battery. The TS200 is useful for testing battery chargers.

To use the TS200 as a four-quadrant power supply or [battery emulator](#), leave the Mod Input unconnected. Adjust the DC Offset knob until the TS200 output voltage reaches the desired supply voltage. The TS200 can source as well as sink current.

LDO PSRR Measurement

Power supply rejection ratio (PSRR) or some time called power supply ripple rejection measurement are often difficult to measure, especially when the device under test (DUT) is heavily loaded. Because most network analyzer cannot drive a heavy load, the TS200 modulated power supply is very useful for PSRR measurement for such devices as LDOs (low dropout regulators) and power amplifiers. PSRR measurement is easy with the aid of the TS200. Figure 3 shows how to measure PSRR. PSRR measurement technique involves a network analyzer, TS200 power amplifier, and device under test (DUT).

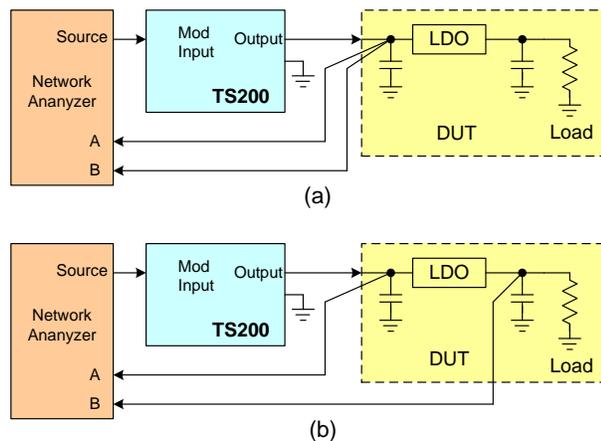


Figure 3. LDO PSRR measurement setup. (a) Calibration setup, (b) PSRR setup.

Figure 3 shows the LDO PSRR measurement setup. Using a network analyzer, the source is connected to the TS200 modulation input. The TS200 output is connected to the LDO supply input. It is recommended to reduce the LDO input capacitance to minimum. Since the TS200 can drive a heavy load, thus the LDO output can be loaded with the desired loading resistor (i.e. maximum specified load).

Set the TS200 modulation input to AC-coupled. Adjust the DC Offset knob until the output DC voltage reaches the desired voltage (i.e. 3.3V). Typically for PSRR measurement, the supply ripple amplitude is 200mVpp. If you are using the A-version, set the network analyzer output to 200mV. If you are using the B-version and consider the modulation gain is 20dB, set the network analyzer output amplitude to 20mVpp.

First the network analyzer and the TS200 need to be calibrated. Figure 3a shows the calibration setup. The network analyzer input-A and input-B are connected together at one point on the DUT board near the LDO supply input. Set the network analyzer to calibration mode and sweep over the frequency

range (i.e. 100Hz to 100kHz) to be measured. Save the calibration data for later use. Refer the network analyzer manual for detailed calibration setup.

After calibration, LDO PSRR measurement setup is shown Figure 3b. The network analyzer input-B is moved to the LDO output near the capacitor while keeping input-A at the LDO input. Again sweep the network analyzer over the desired frequency range. You may refer to the network analyzer manual for details. After subtracting the calibration data, PSRR data is plotted. Figure 4 shows an example of PSRR plot. Table 1 shows a list of network analyzers can be used with TS200.

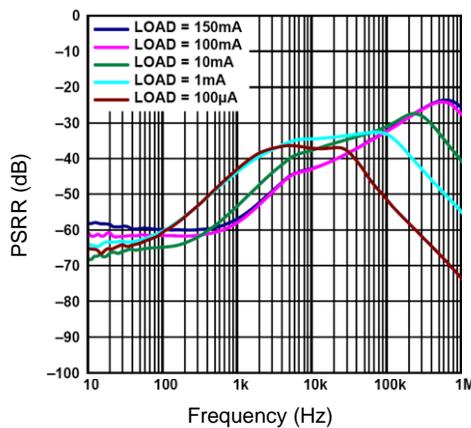


Figure 4. Example of PSRR plot.

Manufacturer	Model
AP Instruments	Model 300
Omicron	Bode 100
Agilent	4395A
Audio Precision	SYS2722

Table 1. List of network analyzers

LDO PSRR Measurement with Oscilloscope

Alternatively, PSRR measurement can be done using an oscilloscope. Place the oscilloscope probes as shown in Figure 5. CH1 probe is connected to the LDO supply input near the capacitor and CH2 probe is connected to the LDO output near the capacitor. 1x probe is recommended due high oscilloscope noise floor.

Connect a function generator to the TS200 Modulation input. Set the function generator output to 200mVpp sinewave or 20mV if B-version is used. Set the frequency to the frequency of interest (i.e. 1kHz). Then set the TS200 modulation to AC-couple. Adjust the DC Offset knob until the TS200 output voltage reaches the desired voltage (i.e. 3.3V).

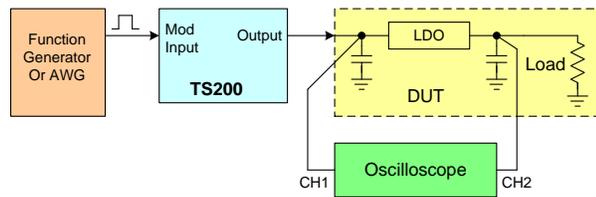


Figure 5. PSRR measurement using an oscilloscope.

Using the oscilloscope, one can measure the amplitude voltage at CH1 and CH2. Divide CH2 by CH1 is the PSRR. One can use the below equation for PSRR calculation in dB.

$$\text{PSRR} = 20\log(\text{CH2}/\text{CH1})$$

If PSRR is better than 40dB, it is recommended to increase the TS200 output ripple voltage to 500mVpp due to oscilloscope has lower sensitivity than network analyzer.

Amplifier PSRR Measurement

The TS200 is also ideal for amplifier power supply rejection ratio measurements, especially power amps operating at maximum load conditions. Such amplifiers as audio amplifiers (class-A, B, AB, D and G) with heavy loading are ideal for TS200. The TS200 can also measure PSRR for op-amps, differential amplifiers, unity gain buffers, digital-to-analog converters, and analog-to-digital converters, etc.

Op amp PSRR measurement is same as LDO except for a few minor differences. Please see Figure 6 and refer to the previous section, “*LDO PSRR Measurement*”, for amplifier PSRR measurement.

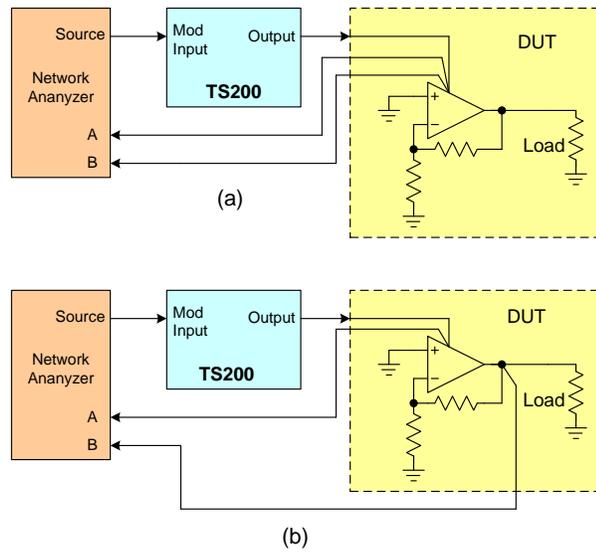


Figure 6. PSRR measurement setup for amplifier. (a) Calibration setup, (b) PSRR setup.

As shown in Figure 6, the amplifier input is grounded, either AC or DC ground, for PSRR measurement. Calibrate the setup as shown in Figure 6a with the network analyzer input-A and input-B connected to the same point at the amplifier's supply input. After calibration, move input-B to the amplifier output as shown in Figure 6b. Then measure PSRR in the same way as the LDO in the previous section.

Amplifier CMRR Measurement

Amplifier common-mode rejection ratio or CMRR can be measured with TS200. Figure 7 shows how to measure CMRR. CMRR measurement for amplifiers is the same as PSRR except for a few minor differences.

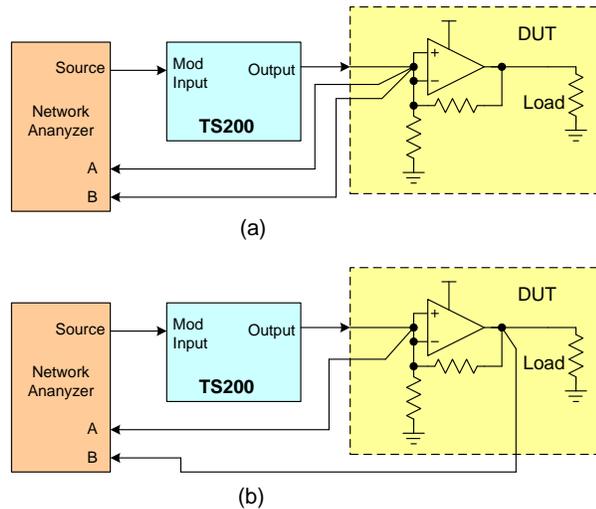


Figure 7. CMRR measurement setup for amplifier. (a) Calibration setup, (b) CMRR setup.

As shown in Figure 7, the amplifier's positive and negative inputs are connected together and connected to the TS200's output. Using a network analyzer, the source is connected to the TS200 modulation input.

Set the TS200 modulation input to AC-coupled. Adjust the DC Offset knob until the output DC voltage reaches the desired common-mode voltage (i.e. $\frac{1}{2}$ VCC). Typically for CMRR measurement, the supply ripple amplitude is 200mVpp.

First the network analyzer and the TS200 need to be calibrated. Figure 7a shows the calibration setup. The network analyzer input-A and input-B are connected together at one point on the DUT board near the amplifier input. Set the network analyzer to calibration mode and sweep over the frequency range (i.e. 100Hz to 100kHz) to be measured. Save the calibration data for later use. Refer the network analyzer manual for detailed calibration setup.

After calibration, amplifier CMRR measurement setup is shown Figure 7b. The network analyzer input-B is moved to the amplifier output while keeping input-A at the input. Again sweep the network analyzer over the desired frequency range. You may refer to the network analyzer manual for details.

Line Transient Measurement

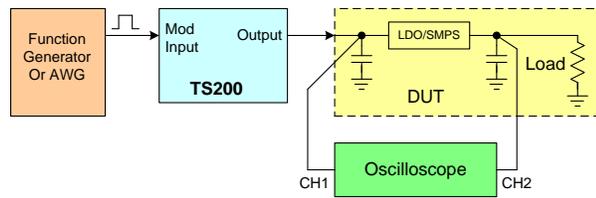


Figure 8. Line transient measurement setup.

Most LDOs and switch-mode power supply (SMPS) specified their line transient specifications. Line transient response specifies its output voltage change after an input voltage step change. For example, an LDO specified its output voltage deviates less than 5mV for a 200mV input voltage step from 3.6V to 3.8V in 10 microseconds. This is also called line step response.

Figure 8 shows a line transient test setup. A function generator generates a square pulse with a specific rise and fall time (i.e. 10us). The function generator is connected to the Mod input of TS200 and the TS200 output is connected to the device under test. Typically the TS200 is set to DC-couple. Set the function generator's pulse high and low voltages generate the transient step. For example, to generate a 3.6V to 3.8V voltage step, set the function generator output voltage low to 3.6V and output high voltage to 3.8V. If B-version is used, set the output voltage low to 0.36V and output high voltage to 0.38V, since the TS200 gain is 20dB.

It is recommended to keep the DUT input capacitor to minimum (0.1uF or less) to allow faster rise and fall time. Use as short cables as possible (Less than 12 inches) connecting TS200 output and the DUT. Twist the cables to together to minimize inductance.

To measure the line transient step, connect an oscilloscope probe (CH1) to the DUT input and another probe (CH2) to the DUT output as shown in Figure 8. The transient response is measured at CH2. Figure 9 shows an example of line transient measurement.

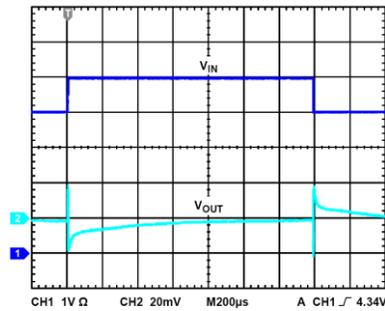


Figure 9. Line transient measurement example.

Power Supply Noise Injector

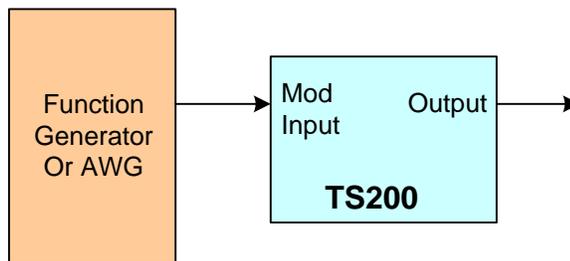


Figure 10. Power supply noise simulator

In some applications, the device under test may be sensitive to power supply noise. For example, VCO (voltage controlled oscillator) phase noise may be degraded with excessive supply noise. The TS200 can be used to aid supply noise sensitive circuit testing.

Figure 10 shows a supply noise simulation setup. The function generator is set to noise output. The function generator output is connected to the TS200 Mod input. The input is set to AC-couple. Adjust the DC Offset knob until the TS200 output voltage reaches the desired DUT supply voltage level. Adjust the noise level on the function generator to see how the DUT is responded to supply noise.

Chapter 4: Specifications

Electrical Specifications

Parameter	Condition/Note	MIN	TYP	MAX	UNIT
Output Voltage Range	TS200-0	-10		+10	V
	TS200-1	-20		+20	
	TS200-2	-20		+45	
	TS200-3	-10		+70	
	TS200-4	0		+15	
	TS200-5	-40		+40	
Continues Output Current	See Typical Performance Curves	-			
Modulation Input Voltage Range	DC	-20		+20	V
Modulation Gain	Non-inverted	A-version	0		dB
		B-version	20		
Min Modulation Frequency	-3dB, no load	AC-Coupled		1	Hz
		DC-Coupled	DC		
Max Modulation Frequency	-3dB, no load, small signal	AC-Coupled	1.0		MHz
		DC-Coupled	1.0		
Slew Rate			16		V/ μ s
LCD Voltmeter Accuracy	Midrange		± 1.0		%







General Specifications

Power supply adapter Input Voltage	100VAC to 240VAC
Power supply adapter Input Frequency	50Hz/60Hz
Operating Temperature Range	0°C to 40°C
Storage Temperature Range	-20°C to +60°C
Operating Humidity Range	20% to 80% (no condensation)
Weight	3.6 kg
Dimension (Inches)	10.0" x 8.5" x 5.25"





TS200 Options

Options	Output Voltage Range	Modulation Gain (V/V)	Output Current
TS200-0A	-10V to +10V	+1	See Typical Performance Curves
TS200-0B	-10V to +10V	+10	
TS200-1A	-20V to +20V	+1	
TS200-1B	-20V to +20V	+10	
TS200-2A	-20V to +45V	+1	
TS200-2B	-20V to +45V	+10	
TS200-3A	-10V to +70V	+1	
TS200-3B	-10V to +70V	+10	
TS200-4A	0V to +15V	+1	
TS200-5A	-40V to +40V	+1	
TS200-5B	-40V to +40V	+10	

Typical Performance

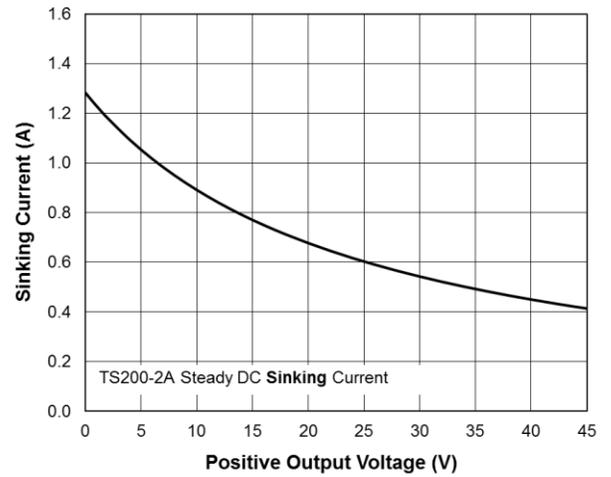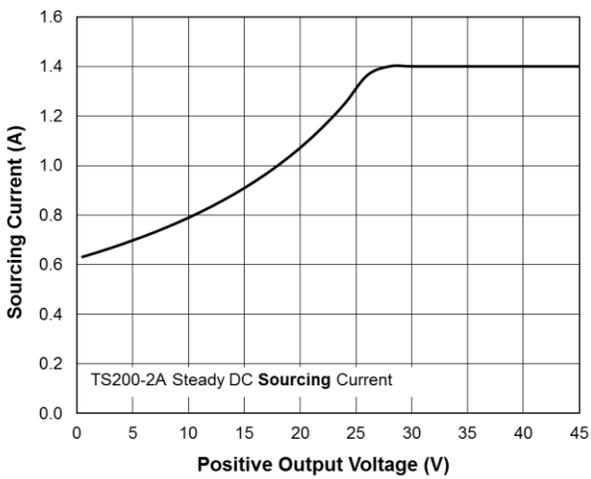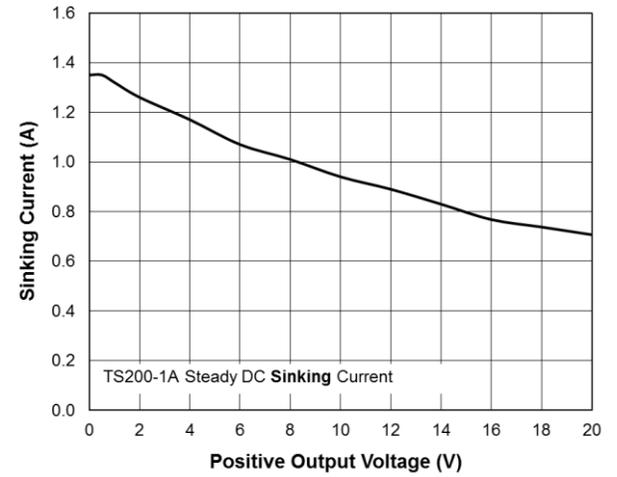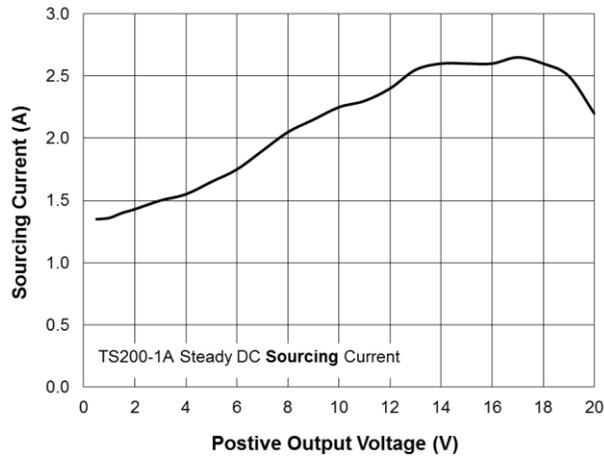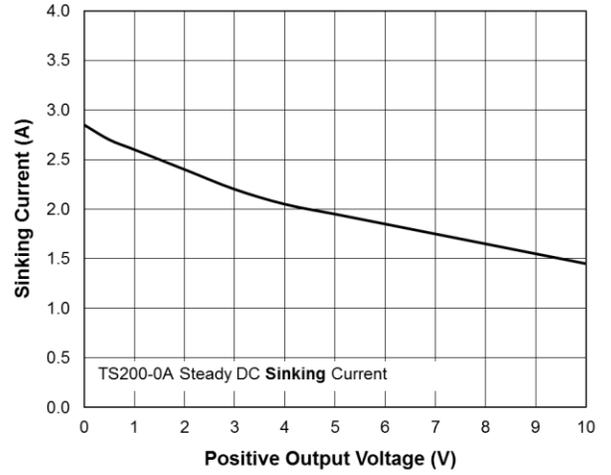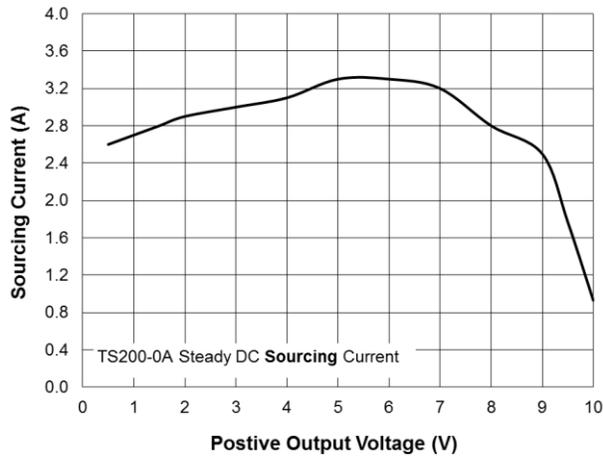

Typical Performance

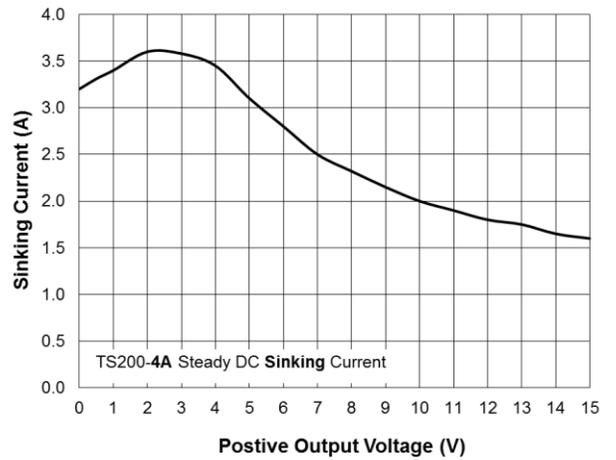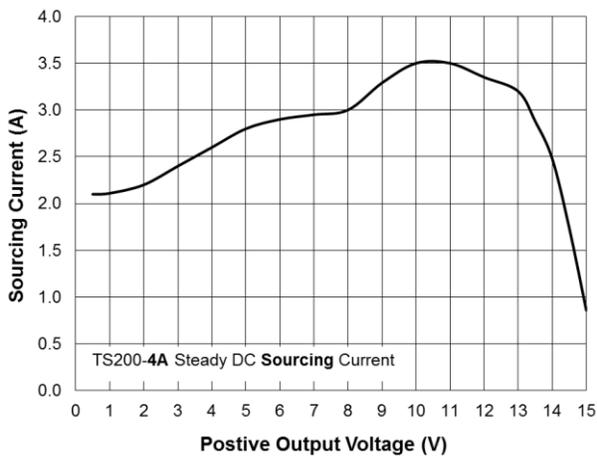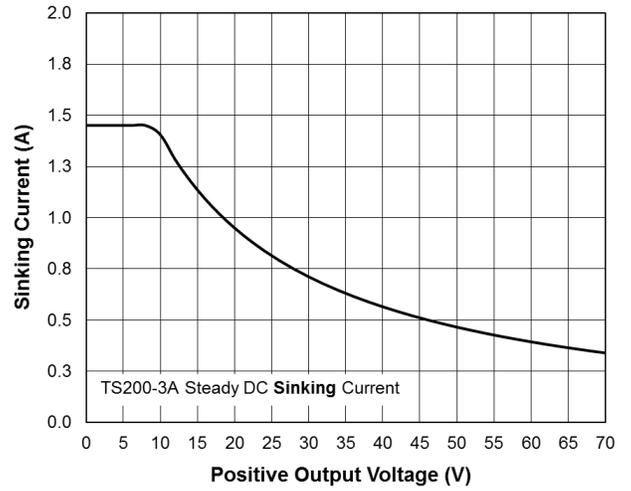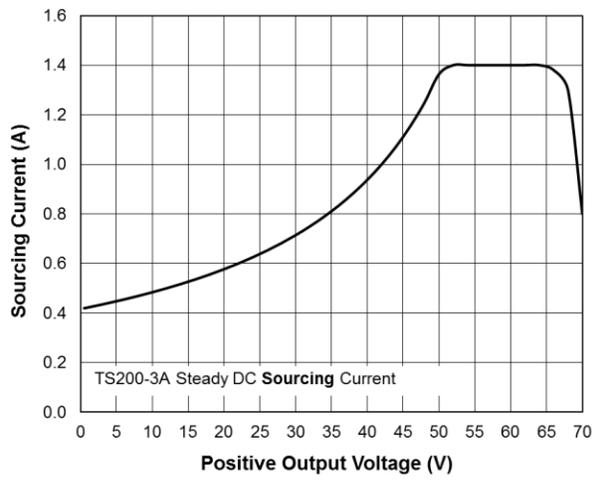

Accel Instruments

Email:
info@accelinstruments.com

Website:
www.accelinstruments.com